


HC678 Model

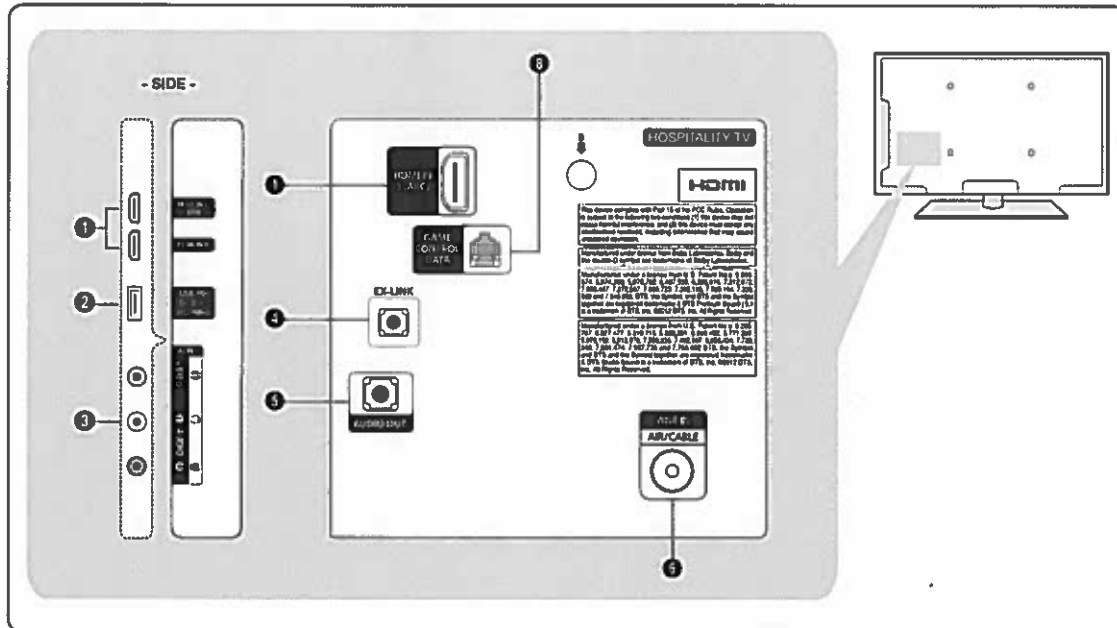

✎ Whenever you connect an external device to your TV, make sure that the TV and the device are turned off.

✎ When connecting an external device, match the color of the connection terminal to the cable.

1 **HDMI IN 1, 2 (DVI), 3 (ARC)** : Connects to the HDMI jack of a device with an HDMI output.

✎ No separate sound connection is needed for an HDMI to HDMI connection. HDMI connections carry both audio and video.

✎ Use the HDMI IN 2 jack for a DVI connection to an external device. Use a DVI to HDMI cable or DVI-HDMI adapter (DVI to HDMI) for the video connection.

2 **USB / CLONING**

- Connector for software upgrades and Media Play, etc.
- Service connection.

3 **VIDEO / L-AUDIO-R**

- Connect a VIDEO cable to an appropriate external A/V device such as a VCR, DVD, or Camcorder.
- Connect audio cables to "L-AUDIO-R" on your TV and the other ends to corresponding audio out jacks on the A/V device.

4 **EX-LINK** : Connect this jack to the jack on the optional RJP (Remote Jack Pack). The RJP allows you to connect external devices (Camcoders, PCs, DVD players, etc) easily.

5 **AUDIO OUT** : Connects to the audio input jacks on an Amplifier/Home Theater.

6 **ANT IN or AIR/CABLE**

- To view television channels correctly, the TV must receive a signal from one of the following sources:
- An outdoor antenna / A cable television system / A satellite receiver.

7 **DATA**

- Used to support data communication between the TV and the external SBB or STB.
- Connects using an RJ-12 type of plug.

8 **GAME CONTROL DATA**

- Used to connect the Lodgenet game controller in the Lodgenet system or support data communication between the TV and the external SBB or STB.
- Connects using an RJ-12 type of plug.

10 English